



2302837
User's Guide



Fast Wireless Charging Pad

2

We hope you enjoy your Fast Wireless Charging Pad from RadioShack.

Please read this user's guide before using your new wireless charging pad.

Package Contents

- Fast Wireless Charging Pad
- 3-Foot USB-A to USB-C Cable
- User's Guide


IMPORTANT:

USB power adapter not included. Fast charging requires a Quick Charge 3.0 compatible USB-A power adapter. Charging speeds will be reduced when using a non-compatible USB power adapter. For best results, use with RadioShack Catalog N^o 2731157.

Metal, magnetic attachments, and credit cards may interfere with charging.

Connect It!

1. Connect the included USB cable to the USB-C port on the charging pad.
2. Connect the USB cable to the USB port on a Quick Charge 3.0 compatible USB power adapter (not included).
3. Plug the USB power adapter into a power outlet.

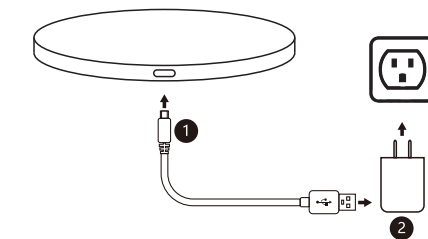

3

Charge It!

1. Place your Qi-compatible device on the charging pad.
2. The white status light on the pad will begin to glow. Your device should indicate that it is now charging. The status light on the pad will automatically turn off after 12 seconds.
3. Remove your device once it is fully charged. The status light on the charging pad will flash briefly to indicate that charging has completed.

Troubleshooting

- If the status light does not turn on, reposition your device.
- If the status light blinks rapidly, there is interference between your device and the charging pad. Remove any objects between the device and the charging pad.

4

Specifications

Input Connector: USB Type-C
 Power Input: 5V=3A or 9V=2A or 12V=1.5A
 Power Output: 10W Max.
 Charging Efficiency: ≥ 72%
 Charging Distance: ≤ 8mm
 Working Frequency: 110-205kHz

5

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

6

Limited Warranty

General Wireless Operations Inc., doing business as RadioShack (hereafter "RadioShack") warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store, RadioShack.com or an authorized RadioShack franchisee or dealer. RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to the original purchase location or visit www.radioshack.com/warranty. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same or a comparable product, or (b) refund the purchase price. All replaced products, and products on which a refund is made, become the property of RadioShack. RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED

7

WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

You may contact RadioShack at:
 RadioShack Customer Care
 801 NE 38th St
 Fort Worth, TX 76106
 1-800-THE-SHACK

www.RadioShack.com

8

RoHS Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2019 General Wireless Operations Inc. All rights reserved. RadioShack is a registered trademark of General Wireless IP Holdings LLC, used under license.

11A19
2302837
Printed in China

9